

RSM2000 LED Codes.

Controller LED Codes.

Hex	LED Pattern										Meaning	
	1	2										
00											} Alternating	Active, no fault.
80												
6E											} Alternating	Passive, no fault
EE												
FF												Ctrl held in reset state
EA												Ctrl in wrong slot
36											} Alternating	Processor SIMM fault
00												
37											} Alternating	Data Cache SIMM fault
00												

Notes :

- All other LED codes may be taken to indicate a Controller Module fault.
- LED 1 indicates a controller fault.
- LED 2 indicates power to the controller.

Front Panel LED Codes.

- Power On
- PSU Fault
- Fan Fault
- Controller Fault
- Data Cache Active

Disk Tray LED Codes.

- Power On
- PSU A Fault
- PSU B Fail
- Fan Warning
- Fan Fault
- Over Temperature
- Audible alarm reset switch

Other Modules :

- Controller PSU's have a single green "power on" LED each.
- PSU Fan module has a green "power on" LED and an amber "fault" LED.