

Sun StorEdge A1000 Array Single-Host Configuration

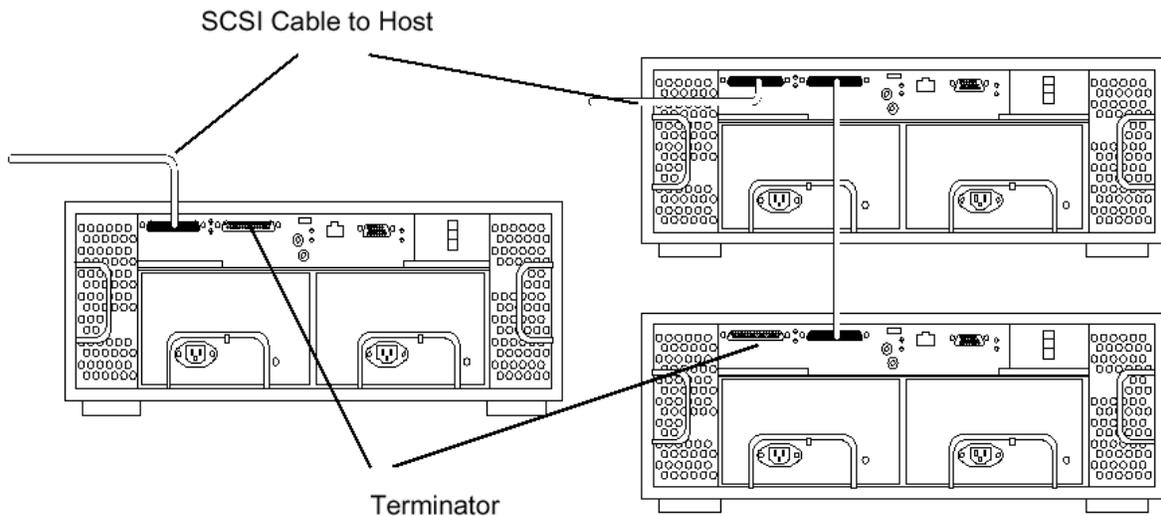


Figure 9. Single and Daisy-chained Sun StorEdge A1000 array connected to a single host

Sun StorEdge A1000 Array Cluster Support Configuration

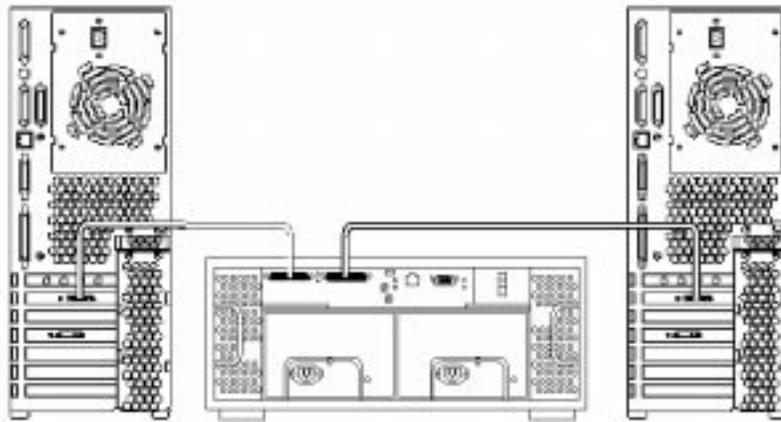


Figure 10. Sun StorEdge A1000 array connected to two hosts

- Single host is the basic configuration. Clustering is also supported. Each Sun StorEdge A1000 array controller module interfaces to the host through an UltraSCSI differential host bus adapter.
- The SCSI Out ports on the Sun StorEdge A1000 array controller module must be terminated unless the array is daisy-chained to another array or clustered with two hosts. (Refer to the *Sun StorEdge A1000 Installation, Operation, and Service Guide*.)