



Memory Module pairing

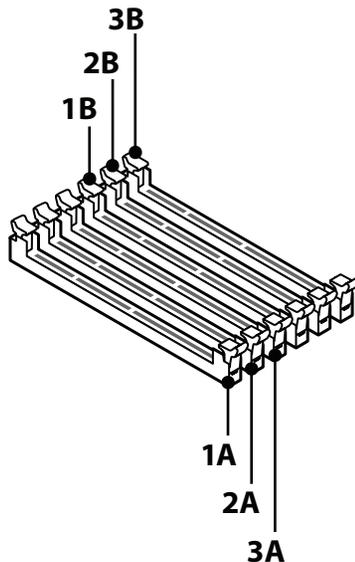

Sun Cobalt™

## LX50

### Memory Module Removal/Upgrade

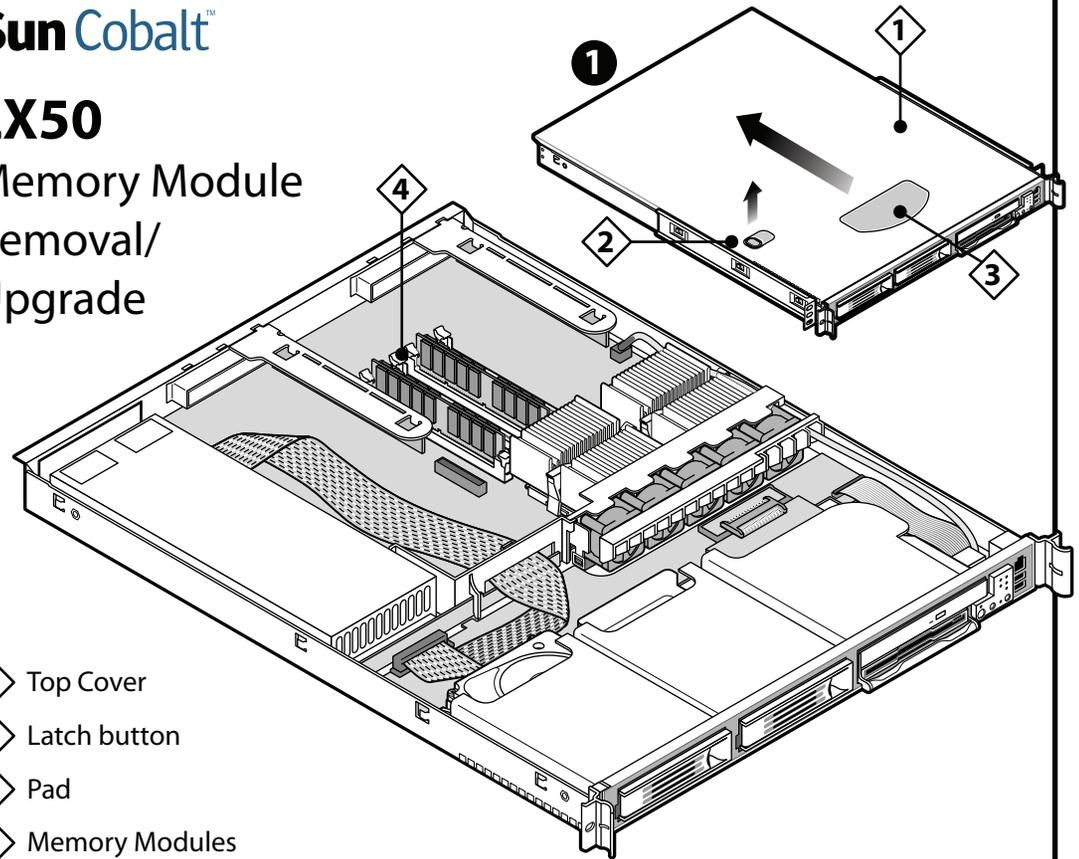

- 1 Top Cover
- 2 Latch button
- 3 Pad
- 4 Memory Modules

#### Caution! Use included ESD wrist strap.

- 1 While pressing the latch button (2) with your left thumb, push down on the top cover and slide it back using the heel of your right hand on the black pad (3).
- 2 Push down on the lock levers on both ends of the memory module socket. The levers rotate and the memory module is pushed loose from the slot.
- 3 Lift out and remove the memory module. Installation is the reverse of this procedure.  
Note: When inserting new memory modules, install in pairs (not side-by-side) and in the following order: 1A and 1B, 2A and 2B, 3A and 3B (see panel at left). Each DIMM in a pair must be the same memory size and type.
- 4 After the memory module has been removed/replaced, run the Platform Confidence Test as described in the LX50 Server User Guide.

See the Sun Cobalt LX50 Server User Guide (on the Documentation CD) for detailed instructions supporting all maintenance procedures.

**Warning!** Use of non-approved parts may void the warranty.